

## CCTV CAMERA INSTALLATION TRAINING-TAMIL



<b>Course Name</b>	<b>CCTV Camera Installation Training</b>
<b>Course Code</b>	<b>CCTV-T</b>
<b>Course Activation</b>	<b>30 days + 30 days is Free = 60 days</b>
<b>Timing</b>	<b>24x7</b>
<b>We Provide</b>	<b>Online Exam, Worldwide Online Verification Certificate in PDF Format, Life time Login free for Doubt Clearing (But course Link is working for 60/90/120 Days)</b>

<b>SESSION</b>	<b>DESCRIPTION</b>
SESSION-1	<b>Introduction</b>
SESSION-2	<b>TOOLS &amp; TESTING EQUIPMENT</b> 1.What are the requirement of tools 2. How using camera tester
SESSION-3	<b>Security Camera</b> 1. Various types of Indoor & outdoor cameras 2. Camera specification-explain 3. What is inside parts of camera 4. How check IR module 5. How check camera by camera tester
SESSION-4	<b>CCTV CABLES AND CONNECTOR</b> 1. What are the required tools for CCTV cable crimping 2. What are the required cable and connectors for CCTV installation 3. What is cable -explain 4. Co-axial cable crimping method 5. How check co-axial cable 6. Audio crimping and Balun connectivity method
SESSION-5	<b>SECURITY SYSTEM PARTS AND ITS TROUBLESHOOTING</b> 1. How check security camera SMPS & ADAPTER 2. SMPS fault finding and its solution 3. How to use camera housing 4. various types of outdoor camera bracket and its usage method
SESSION-6	<b>DVR SYSTEM</b> 1. What is DVR and types of DVR 2. DVR inside parts view 3. How connect hard disk to DVR
SESSION-7	<b>DVR INSTALLATION-1</b> 1. 4 Channel DVR installations 2. How use HIK-Vision DVR main menu 3. DVR camera settings method
SESSION-8	<b>CAMERA RECORDING METHOD</b> 1. Manual recording and playback method 2. DVR timer recording method
SESSION-9	<b>DVR INSTALLATION-2</b> 1. Main menu and camera setting method 2. Security setting & recording method
SESSION-10	<b>VIDEO BACKUP METHOD</b> 1. How to get video backup file from HIK-Vision DVR 2. How to get backup video file from Dahua DVR
SESSION-11	<b>8-CHANNEL DVR</b> 1. 8-Channel Camera Viewing 2. Recording & Playback and other setting method
SESSION-12	<b>ONLINE VIEW FOR DVR</b> 1.DVR Network Checking 2.Network Setting For DVR

	<ul style="list-style-type: none"> <li>3.How Find IP Address</li> <li>4.How Register DVR IP Address To Modem</li> <li>5.DVR Online View</li> </ul>
SESSION-13	<p><b>USB DVR INSTALLATION</b></p> <ul style="list-style-type: none"> <li>1. What is USB DVR &amp; driver setup file installation</li> <li>2. USB DVR camera viewing recording &amp; other setting</li> </ul>
SESSION-14	<p><b>NVR &amp; IP CAMERA INSTALLATION</b></p> <ul style="list-style-type: none"> <li>1. NVR, IP Camera installation method</li> <li>2. FISH EYE IP CAMERA installation and IP Address configuration</li> <li>3. How changes IP address</li> </ul>
SESSION-15	<p><b>NVR local server monitoring and network cable crimping method</b></p> <ul style="list-style-type: none"> <li>1. IP camera NVR view and local server monitoring</li> <li>2. NETWORK CABLE CRIMPING METHOD</li> <li>3. Network cable checking method via camera tester</li> </ul>
SESSION-16	<p><b>PTZ CAMERA</b></p> <ul style="list-style-type: none"> <li>1. What is PTZ Camera</li> <li>2. What is joystick</li> <li>3. How check PTZ camera via camera tester</li> <li>4. How connect PTZ camera to DVR</li> <li>5. How connect PTZ camera to Joystick and preset method</li> </ul>
SESSION-17	<p><b>Smartphone &amp; Tablet PC Monitoring For CCTV Camera</b></p> <ul style="list-style-type: none"> <li>1. Mobile phone view</li> <li>2. Tablet PC view</li> </ul>
SESSION-18	Mobile view through USB dongle DVR
SESSION-19	<p><b>WIRELESS CAMERA USING METHOD</b></p> <ul style="list-style-type: none"> <li>1. Wireless camera connects to TV</li> <li>2. Wireless camera connect to Mobile Phone</li> </ul>
SESSION-20	<p><b>Varifocal Zoom Camera &amp; Lenz</b></p> <ul style="list-style-type: none"> <li>1. Various models Zoom camera and lenz size comparison</li> <li>2. Zoom box camera operating method</li> <li>3. Digital Varifocal camera using method &amp; setting menu</li> </ul>

### **CHIP SYSTEMS**

Old No.107, Lake View Road, West Mambalam, Chennai-33. (Near Postal colony 3rd Street)  
Phone: 044-2474 3860. Cell: +91-98410 99911, 94440 34246. Email: admin@chipsystems.in